


Garbage Disposal Wrench – Item 37520


Use the Superior Tool® Garbage Disposal Wrench to free up disposals jammed with food debris such as corn husks, artichokes, celery sticks and other stringy, dense items.

1. Turn off all electrical current to the garbage disposal before working on the unit. If the unit has stopped while it is jammed, make sure it hasn't tripped an overload protection circuit. Some disposals have a reset button on the bottom of the unit that will trip if the motor overheats.
2. Insert the wrench into the disposal. The rivet on the wrench flange allows the flange to rotate so it can fit into the drain opening. Once in the disposal, the flange will contact the shredders mounted on the shredding plate.
3. While running water through the disposal, rotate the inserted wrench clockwise a couple turns, if possible, then rotate the wrench counterclockwise.
4. Remove the wrench and turn on the electrical current to the disposal. While still running water, turn the disposal to clear the jam. Repeat the steps above if necessary.

WARNING! Never work on a garbage disposal that has electrical current flowing to it. Never put your hand, a broom handle or other foreign objects into a garbage disposal to dislodge a jam.

 **WARNING:** This packaging can expose you to chemicals including Vinyl Chloride, which is known to the State of California to cause cancer. For more information, go to www.P65Warnings.ca.gov.

 **ADVERTENCIA:** Este embalaje puede exponerle a químicos, incluyendo cloruro de vinilo, que es conocido por el Estado de California como causante de cáncer. Para mayor información, visite www.P65Warnings.ca.gov.

 **AVERTISSEMENT:** Ce emballage peut vous exposer à des agents chimiques, y compris chlorure de vinyle, identifiés par l'Etat de California comme pouvant causer le cancer. Pour de plus amples informations, prière de consulter www.P65Warnings.ca.gov.



Superior Tool®

Naperville, IL 60563

superiortool.com

© 2023 Superior Tool Company